

DEMONTAŻ MODUŁÓW KATALITYCZNYCH / CATALYST MODULES REMOVING

52	51	50	9	53	54
47	46	45	8	48	49
42	41	40	7	43	44
37	36	35	6	38	39
32	31	30	5	33	34
27	26	25	4	28	29
22	21	20	3	23	24
17	16	15	2	18	19
12	11	10	1	13	14

BELKA WCIĄGNIKI /
HOIST BEAM

DRZWI REAKTORA /
REACTOR DOORS